




Remove original outer housing from the assembly

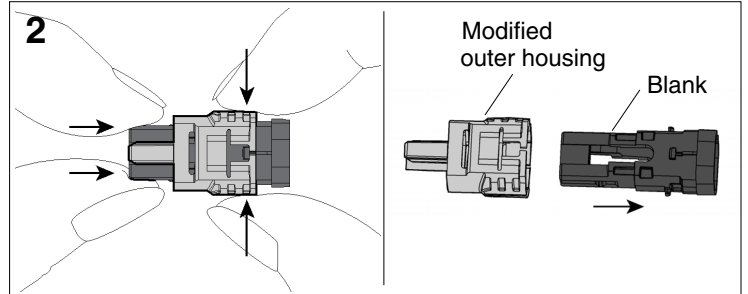


Remove modified outer housing from the blank by squeezing firmly at the back end and pushing the blank forward simultaneously.

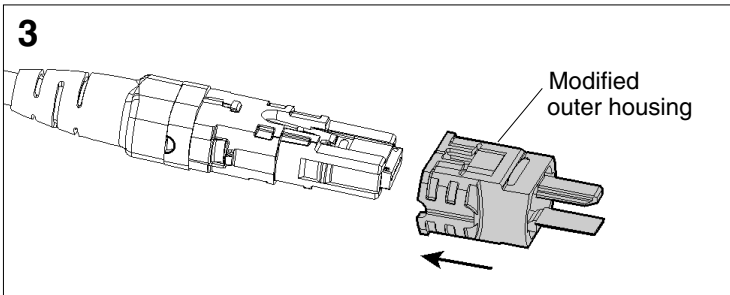


Install modified outer housing onto the assembly in the same orientation.

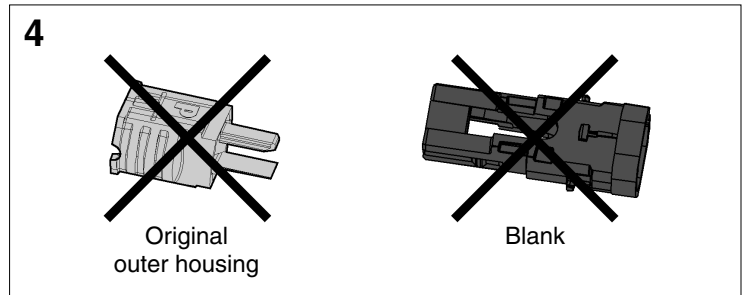


Discard original outer housing and blank.

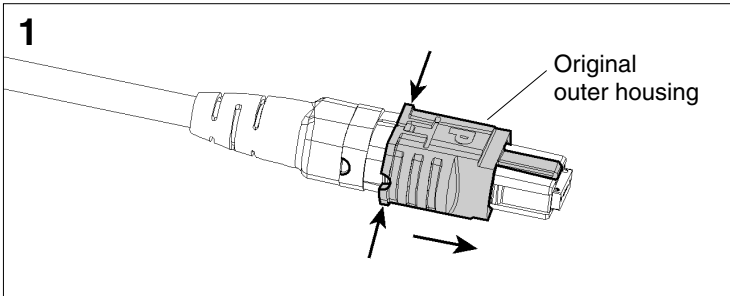


Remove original outer housing from the assembly

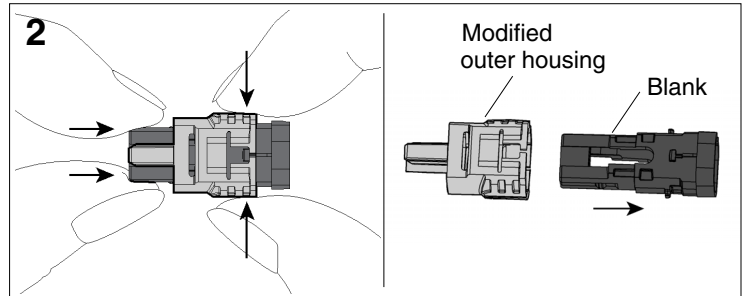

Remove modified outer housing from the blank by squeezing firmly at the back end and pushing the blank forward simultaneously.

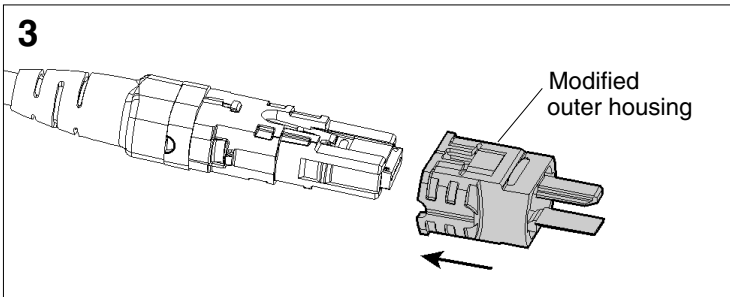

Install modified outer housing onto the assembly in the same orientation.

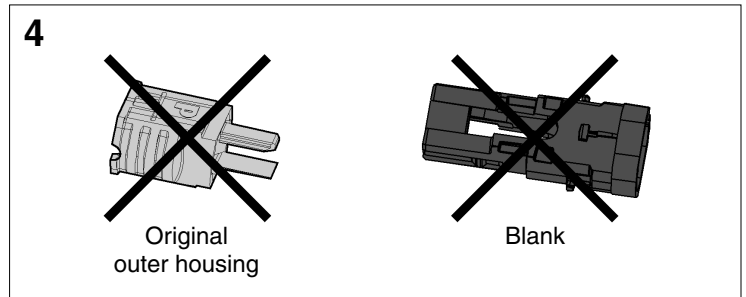


Discard original outer housing and blank.


For Technical Support: [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

E-mail: [techsupport@panduit.com](mailto:techsupport@panduit.com)


Phone: 866-405-6654

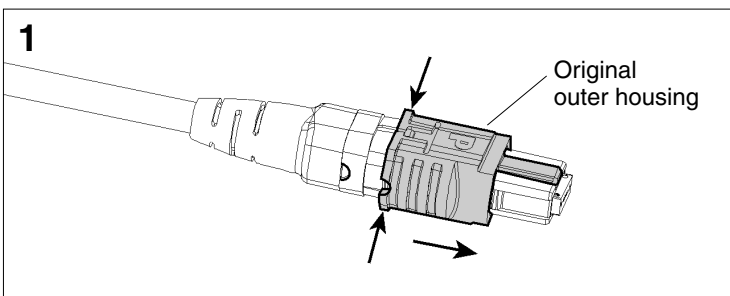


Remove original outer housing from the assembly

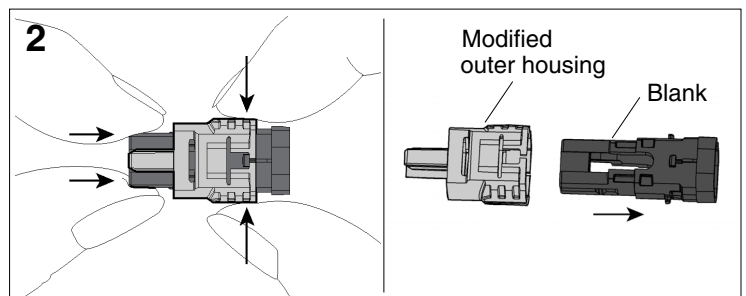

Remove modified outer housing from the blank by squeezing firmly at the back end and pushing the blank forward simultaneously.

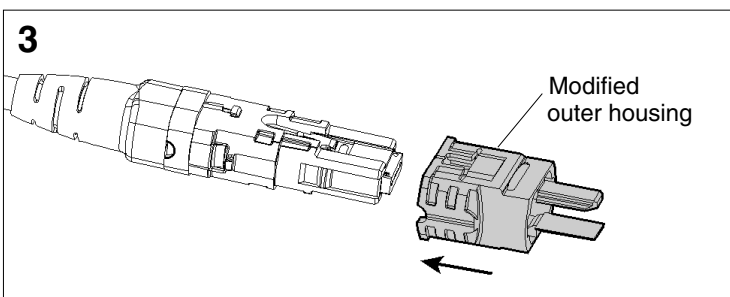

Install modified outer housing onto the assembly in the same orientation.

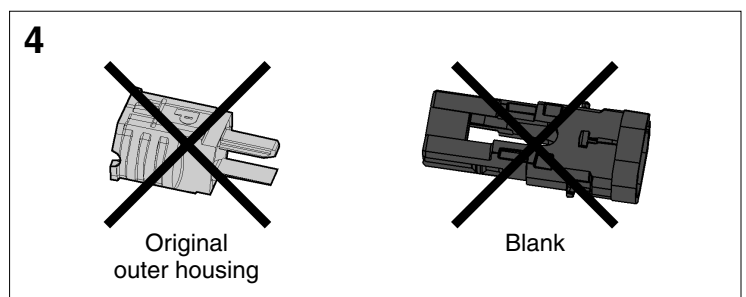

Discard original outer housing and blank.

For Technical Support: [www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

E-mail: [techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone: 866-405-6654