

	Description	Width [mm]	Pkg. Qty.	Cat. No.
	Hat (DIN) Rails — MCS Top Hat Rail (Plastic) Slides onto mounting modules and is then fixed with screws. Has notches for MCS components (prevents movement of components when used with vertical busbar).	45	10	141A-AHR45
		54		141A-AHR54
		63		141A-AHR63
	Hat (DIN) Rails — Standard Top Hat Rail (Plastic) Slides onto mounting modules and is then fixed with screws.	72	10	141A-AHS72
		81		141A-AHS81
	Control Plug Pull-apart terminal block allows fast and simple disconnection of control wiring. Snaps on the support of the mobile device rail. Composed of plug holder, male and female parts.	8 Pole	1	141A-APC8
		10 Pole	1	141A-APC10
		12 Pole	1	141A-APC12
	Control Plug Holder Suitable for use with 8-, 10-, or 12-pole control plugs.			141A-APH
	Spacer module — for compact busbar modules For 9 mm spacing of mounting modules. Connection clips (Cat. No. 141A-AK) are included for attaching the spacer module to the mounting modules. 160 mm long	9	10	141A-CAS9B
	Spacer module — for Standard or ISO busbar modules For 9 mm spacing of mounting modules. Connection clips (Cat. No. 141A-AK) are included for attaching the spacer module to the mounting modules. 200 mm long	9		141A-AS9B
	Spacer Module — for Panel Mounting modules For spacing of load feeders by 9 mm e.g. for improved cooling. Connection clips (Cat. No. 141A-AK) are included for attaching the spacer module to the mounting modules 228 mm long	9		141A-AS9W
	Connection Clip For joining base of mounting modules.		50	141A-AK
	Micro Switch N.C. Contact Only for ISO Modules. Automatically drops out the contactor when the DAP (Device Adapter Plate) (carrying the starter) is unplugged from the base of the ISO busbar module.		10	141A-AS
	Spacing Adapter For use with 63A standard busbar mounting modules with terminals Cat. No. 141A-FS...63 or 141A-FM...63 Required for UL508A applications		4	141A-FTS63

Cat. No. 141A-AS9B