


Motor Starter Components


Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------


Vacuum Bottle Assembly

	SL Vacuum Bottle Assembly (set of 3)	2147A58G02
---	--------------------------------------	------------

 
Contactors Control Circuit Board

	SL Contactor Control Circuit Board	2147A58G03
---	------------------------------------	------------


Contactors Auxiliary Contacts

	SL Contactor Auxiliary Contacts 2 NO/ 2 NC	2147A58G04
---	---	------------


Contactors Phase Barriers

	SL Contactor Phase Barriers (set of 4)	2147A58G12
--	---	------------


Contactors Fuse Tray & Barrier Support

	SL Contactor Fuse Tray & Barrier Support	2147A58G17
---	--	------------


CPT & PT (Control Power Transformer & Potential Transformer) Primary Fuses

	0.81-inch dia. 5kV Max, 1 Amp (set of 3)	2147A11G61
	0.81-inch dia. 5kV Max, 3 Amp (set of 3)	2147A11G49
	0.81-inch dia. 5kV Max, 5 Amp (set of 3)	2147A11G55


Contactors Operating Coils

	SL Contactor Operating Coils	2147A58G11
---	------------------------------	------------

Latch Coil with Rectifier

	SL Latch Coil with Rectifier 24 VDC	2147A58G25
	SL Latch Coil with Rectifier 48 VDC	2147A58G26
	SL Latch Coil with Rectifier 125 VAC-DC	2147A58G27
	SL Latch Coil with Rectifier 250 VAC-DC	2147A58G28

Contactors Mechanical Latch Assembly


	SL Contactor Mechanical Latch Assembly	2147A58G24
---	--	------------

Motor Starter Components



Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------



Contactors Insulator & Bottle Clamp

	SL Contactor Insulator & Bottle Clamp (set of 3)	2147A58G15
--	---	------------


Fuse Clips

	SL PT Primary Fuse Clips & Mounting	2147A58G18
	SL CPT Primary Fuse Clips & Mounting (set of 2)	2147A58G16
	SL Contactor Main Fuse Clips (set of 3)	2147A58G20




Contactors Line or Load Fingers

	SL, Roll-Out Contactor Line Finger & Support (set of 3)	2147A58G50
	SL, Roll-Out Contactor Load Finger & Support (set of 3)	2147A58G51

Contactors Return Spring Assembly

	SL Contactor Return Spring Assembly	2147A58G22
--	-------------------------------------	------------

Isolation Switches

	Isolation Switch Handle, Housing, and Clevis	2147A41G08
	Isolation Switch Tray with Fuse Clamps	2147A41G22
	Isolation Switch Microswitch Assembly	2147A01G01