


NEW!
See reverse

MC Cable Fitting in 2" Trade Size

Low cost • Fits several cable sizes

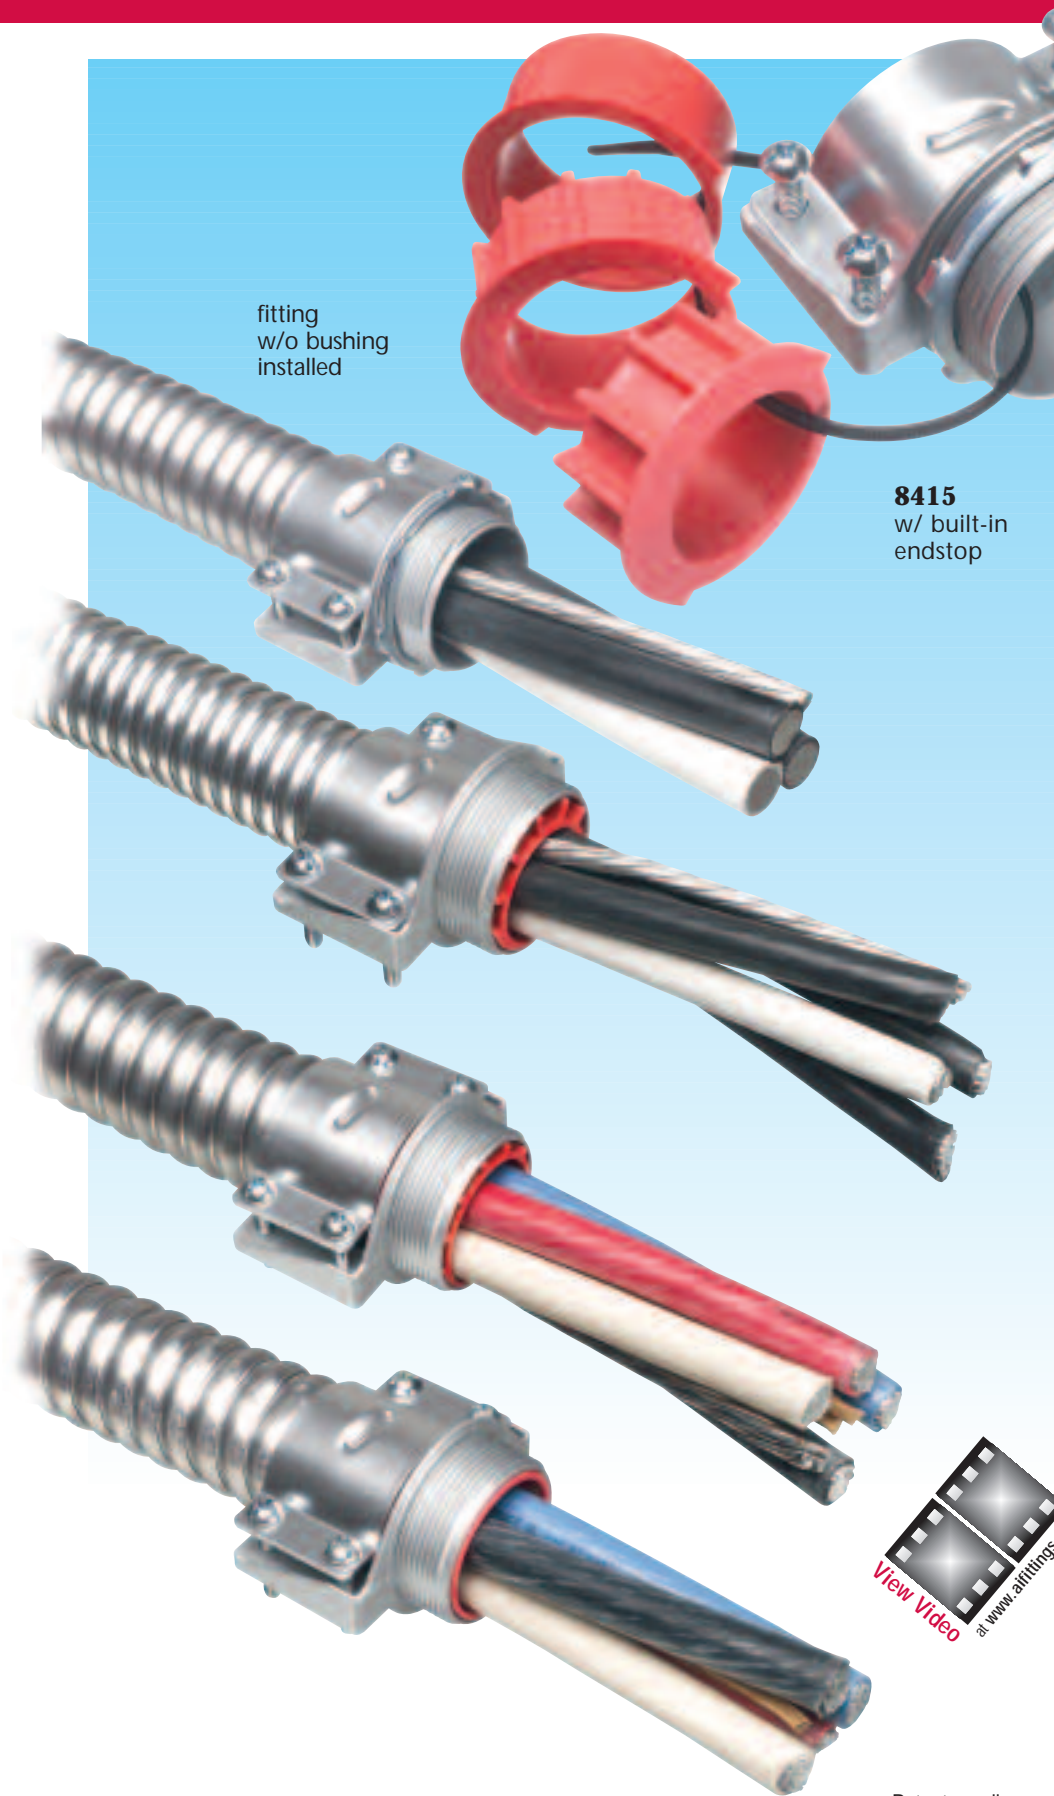

fitting
w/o bushing
installed

8415
w/ built-in
endstop

Save time and money! Arlington's new, low cost MC cable fitting, in the 2" trade size, is super-convenient and cost-effective. The fitting has a built-in end stop, but it also comes with three extra end stop bushings that accommodate different size cable bundles. ONE trade size fits several cable sizes!

If required, using an end stop bushing is fast and easy. There's no need to remove the strap. Just loosen the screws and insert the bushing that works the best with the cables you're installing.

Our zinc diecast 8415 fitting costs much less than steel or malleable iron fittings. And it reduces inventory.

- Built-in end stop in fitting
- UL/CSA Listed

Cable Bundle Diameter-2" Trade Size (8415)

Outer Diameter:	MIN.	MAX.
of Cable	1.70	2.20
of Wire Bundle	1.55	2.05

Examples of 3- and 4-conductor cables usable with 8415

Conductor size/ # of conductors (AWG/KCMIL)	300-4 500-3	350-3	250-4 350-4



1 Stauffer Industrial Park
Scranton, PA 18517
800/233.4717
Fax 570/562.0646
www.aifittings.com

Patent pending


MC Cable Fitting

2" Trade Size • Installs a variety of MC cable

Catalog Number	UPC/DEI/NAED Mfg. #018997	K.O. Size	Unit/Std Pkg	Cable Outer Diameter		Wire Bundle Outer Diameter		Conductor size # of Conductors* (AWG/KCMIL)
				Min.	Max.	Min.	Max.	
8412	08412	1"	20 / 20	.78	1.12	.66	1.00	6/3, 6/4, 4-3, 4-4 2-3, 2-4, 1-3
8413	08413	1-1/4"	20 / 20	1.000	1.46	.87	1.37	2-3, 2-4, 1-3, 1-4, 1/0-3, 1/0-4, 2/0-3, 2/0-4, 3/0-3
8414	08414	1-1/2"	10 / 10	1.36	1.77	1.25	1.59	2/0-4, 3/0-3, 3/0-4, 4/0-3, 4/0-4, 250-3, 250-4
8415	00583	2"	10 / 10	1.70	2.20	1.55	2.05	250-4, 300-4, 350-3, 350-4, 500-3
8416	08416	2-1/2"	5 / 5	2.10	2.70	1.95	2.40	500-3, 500-4, 600-3, 600-4, 750-3
8417	08417	3"	5 / 5	.78	2.50	2.35	3.00	600-4, 750-3, 750-4

* Examples of 3- and 4-conductor cables. Cable dimensions vary dramatically between manufacturers. It is recommended that cable O.D. (outer diameter) be measured to ensure proper cable-to-fitting installation.


Installation is quick and easy. There's no need to remove the strap.

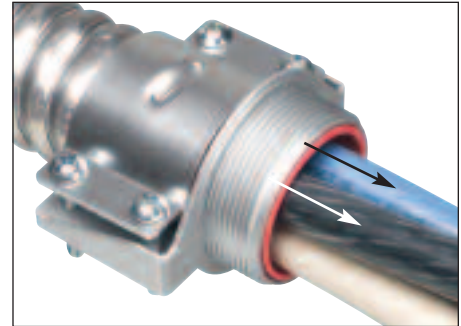

1 Simply loosen the screws and insert end stop bushing if necessary. Slip connector onto MC cable. Retighten screws on strap.



2 If you are using an end stop bushing, determine which one to use by sizing it to the cable bundle (not the metal jacket). **Incorrect size shown above.** The metal jacket should never go through the end stop.

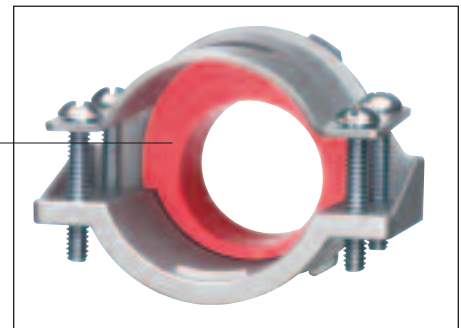

3 Insert the appropriate end stop bushing, making sure that the half-moon shape is positioned at the top of the connector.

Distributed by

More sizes coming soon!



8415
Patent pending

Arlington

1 Stauffer Industrial Park
Scranton, PA 18517
800/233.4717
Fax 570/562.0646
www.aifittings.com



8415 0408/50M