


**RECOMMENDED TIGHTENING TORQUES FOR  
COPPER LOCKTITE® LUGS & TAPS  
FOR COPPER CABLES ONLY.**



1. Strip insulation to barrel length.  
**CAUTION:** Do not nick conductors.
2. Insert wire into connector and tighten to torque values shown in table for the various LOCKTITE® Lug ranges.

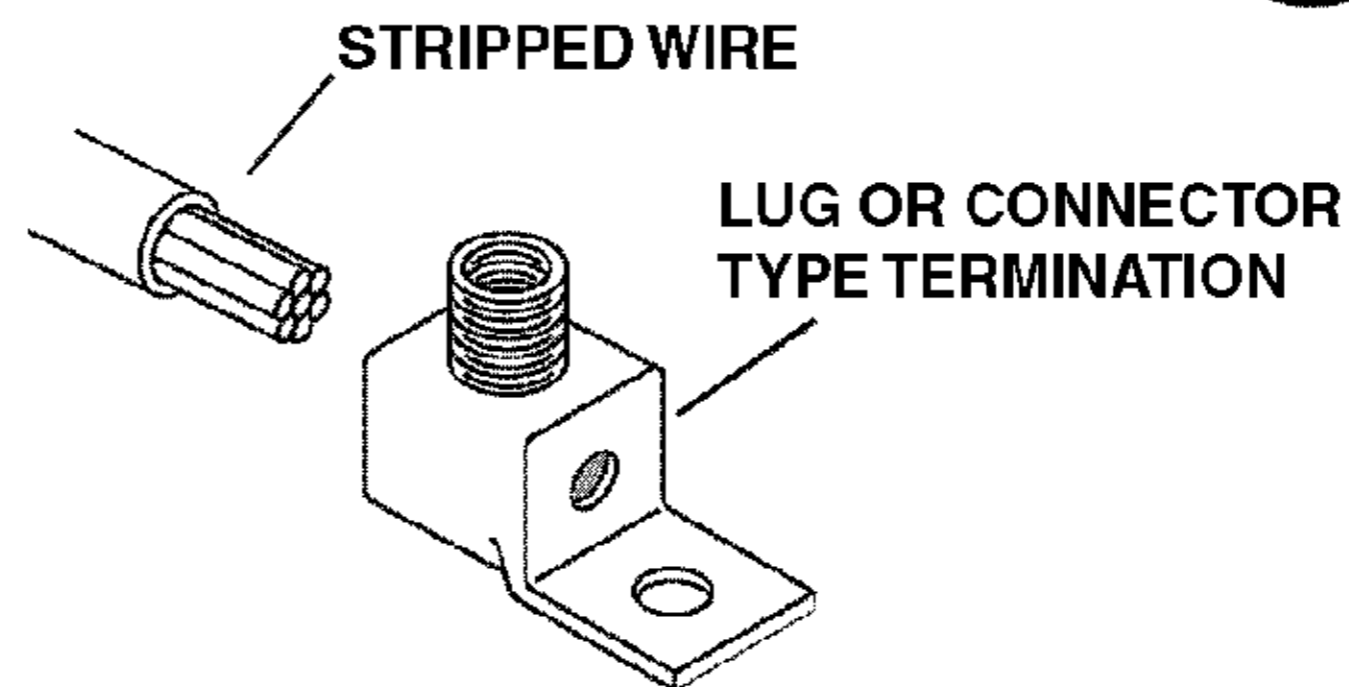

**NOTE:** Connector is intended to secure only single conductors within the specified wire ranges.

T&B RECOMMENDED TIGHTEN TORQUE		
SIZE OF CONDUCTOR RANGES	WRENCH TORQUE INCH-LBS.	SCREW DRIVER TORQUE INCH-LBS.
14 TO 8	—	20
8 TO 4	—	35
4 TO 1	125	—
1 TO 2/0	150	—
2/0 TO 4/0	200	—
4/0 TO 300	250	—
300 TO 500	300	—
500 TO 750	300	—
750 TO 1000	400	—

**WARRANTY:** Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for its intended use. Thomas & Betts manufactures its goods and tools in a manner to be free of defects. Should any defect occur in its goods within two (2) years (or tools within time stated on warranty card) of date of purchase, Thomas & Betts, upon prompt notification, will at its option, exchange or repair the goods or tools or refund the purchase price. Proof of purchase required.

**Limitations and Exclusions:** THIS WARRANTY IS IN LIEU OF ALL OTHER REPRESENTATIONS AND EXPRESSED AND IMPLIED WARRANTIES (INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE), AND UNDER NO CIRCUMSTANCES SHALL THOMAS & BETTS BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY KIND.

Thomas & Betts Corporation  
Memphis, TN  
In Canada, Thomas & Betts Ltd. Iberville, P.Q.  
Website: [www.TNB.com](http://www.TNB.com)